

answers²

Additional Technical Manual

Mainboard D1381 / D1382

English



Are there ...

... any technical problems or other questions you need clarified?

Please contact:

- your sales partner
- your sales outlet

You will find further information in the manuals "Safety" and "Ergonomics".

The latest information and updates (e. g. BIOS update) on our mainboards can be found on the Internet under: <http://www.fujitsu-siemens.com/mainboards>

Dieses Handbuch wurde auf Recycling-Papier gedruckt.
This manual has been printed on recycled paper.
Ce manuel est imprimé sur du papier recyclé.
Este manual ha sido impreso sobre papel reciclado.
Questo manuale è stato stampato su carta da riciclaggio.
Denna handbok är tryckt på recyclingpapper.
Dit handboek werd op recycling-papier gedrukt.

Herausgegeben von/Published by
Fujitsu Siemens Computers GmbH

Bestell-Nr./Order No.: **A26361-D1382-Z180-1-7619**
Printed in the Federal Republic of Germany
AG 0203 02/03



A26361-D1382-Z180-1-7619

**Mainboard D1381 /
D1382**

Additional Technical Manual

Intel, Pentium and Celeron are registered trademarks of Intel Corporation, USA.

Microsoft, MS, MS-DOS and Windows are registered trademarks of Microsoft Corporation.

PS/2 and OS/2 Warp are registered trademarks of International Business Machines, Inc.

Magic Packet is a registered trademark of Advanced Micro Devices, Inc.

Rambus, RDRAM, and the Rambus Logo are registered trademarks of Rambus Inc. Direct Rambus, RIMM, SO-RIMM, and Direct RDRAM are trademarks of Rambus Inc.

All other trademarks referenced are trademarks or registered trademarks of their respective owners, whose protected rights are acknowledged.

Copyright © Fujitsu Siemens Computers GmbH 2003

All rights, including rights of translation, reproduction by printing, copying or similar methods, even of parts are reserved.

Offenders will be liable for damages.

All rights, including rights created by patent grant or registration of a utility model or design, are reserved. Delivery subject to availability.

Right of technical modification reserved.

Contents

Introduction.....	1
Features	2
Mechanics	4
Connectors.....	6
Power supply ATX connector.....	6
Power supply control.....	6
Front panel connector.....	7
LED connector II.....	8
Fan 1 connector.....	8
Fan 2 connector.....	8
LCD status indicator connector.....	9
UBS port C/D and E/F - dual channel	9
Intrusion connector for case open detect for optional push-button (opener).....	10
Audio S/PDIF (2-pin).....	10
Audio S/PDIF (3-pin).....	10
Audio front panel connector	10
CD-ROM audio connector.....	11
Additional power supply	11
Configuration	12
Functions controlled by the configuration switch	12
Power	12
Power requirement for onboard components (worst case)	12
Power loadability.....	12
Documentation	13
Installing drivers.....	13
Upgrading main memory.....	13
Troubleshooting.....	14
Message BIOS update.....	14
The screen stays blank.....	14

Introduction



Depending on the configuration chosen, some of the hardware components described may not be available on your mainboard.

You will find further information e. g. in the complete mainboard Technical Manual and in the "BIOS Setup" description.

Further information regarding drivers is provided on the supplied drivers diskettes or on the "Drivers & Utilities" or "ServerStart" CD. For detailed information please read the "Installing drivers" chapter. The latest BIOS version and drivers can be found on the internet under

<http://www.fujitsu-siemens.com/en/service>.



Computer mainboards and components contain very delicate IC chips. To protect them against damage caused by static electricity, you must follow these precautions:

- Use a grounded wrist strap.
- Unplug your computer before you remove any part of the casing.
- Place the mainboard and the components on a grounded antistatic pad whenever you remove them from the computer.

Hold components by the edge, do not touch any pins or connectors on them.

Once you have installed the mainboard, you should remove the battery protection (i.e. the thin plastic plate between battery and contact spring).

Features

The table shows assembly versions of this mainboard as an example.

D1382-A	D1381-A
---------	---------

Onboard Features

Chipset		
Board Size	µ-ATX	µ-ATX
VGA	✓	✓
Audio	✓	✓
Buzzer / int. Speaker Support	- / ✓	✓ / -
LAN / with Alert-on-LAN	✓ / ✓	✓ / -
HI-SPEED USB	✓	✓
SmartCard Support (USB / serial)	✓ / -	✓ / -
Thermal Management	✓	-
System Monitoring	✓	-
Fujitsu Siemens Keyboard Power Button Support	✓	✓

Internal Connectors

DIMM Sockets (DDR, PC2100)	2	2
AGP Slot (4x, 32Bit, 66 MHz, 1.5 V)	1	1
PCI Slots (32Bit, 33 MHz, 5 V and 3.3 V)	3	3
CNR Slot	-	-
IDE Interfaces (Ultra DMA/100)	2	2
Floppy Interface (up to 2.88 MB)	1	1
S/PDIF* (digital Audio)	1	1
CD / AUX Audio Input	1 / -	1 / -
Frontpanel Audio (headphone, microphone)	1	1
Wake-on-LAN	-	-
USB ports* (2.0, ~480Mb/s)	4	4
Serial Ports* (FIFO, 16550 compatible)	1	1
FAN Connectors PSU / FAN1 / FAN2 / FAN3	1 / 1 / 1 / -	- / 1 / 1 / -
SMBus Connector* (Case Temperature)	1	-
Intrusion Connector* (Case Open)	1	1
Power Connectors ATX / ATX12V / AGP PRO	1 / 1 / -	1 / 1 / -

External Connectors

VGA	1	1
Audio Mic. in / Line in / Line out (2 x 0.5 W / 8 Ω)	1 / 1 / 1	1 / 1 / 1
Game/MIDI	-	-
LAN (RJ-45)	1	1
PS/2 Mouse/Keyboard	1 / 1	1 / 1
USB Ports (2.0, ~480Mb/s)	2	2
Serial Ports (FIFO, 16550 compatible)	1	1
Parallel Port (EPP/ECP)	1	1


* for use with internal devices or optional Front- or Rearpanel

** not supported by standard Power Supplies

Mechanics

Layout Mainboard D1381 / D1382


µATX 9.6" x 9.6" (243.84 mm x 243.84 mm)

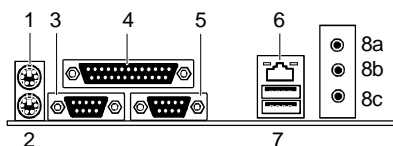

- 1 = PS/2 mouse port
- 2 = PS/2 keyboard port
- 3 = Serial port
- 4 = Parallel port
- 5 = VGA

- 6 = LAN connector
- 7 = USB port
- 8a = Audio Line-In
- 8b = Audio Head-Out
- 8c = Audio Micro-In

The components and connectors marked are not necessarily present on the mainboard.

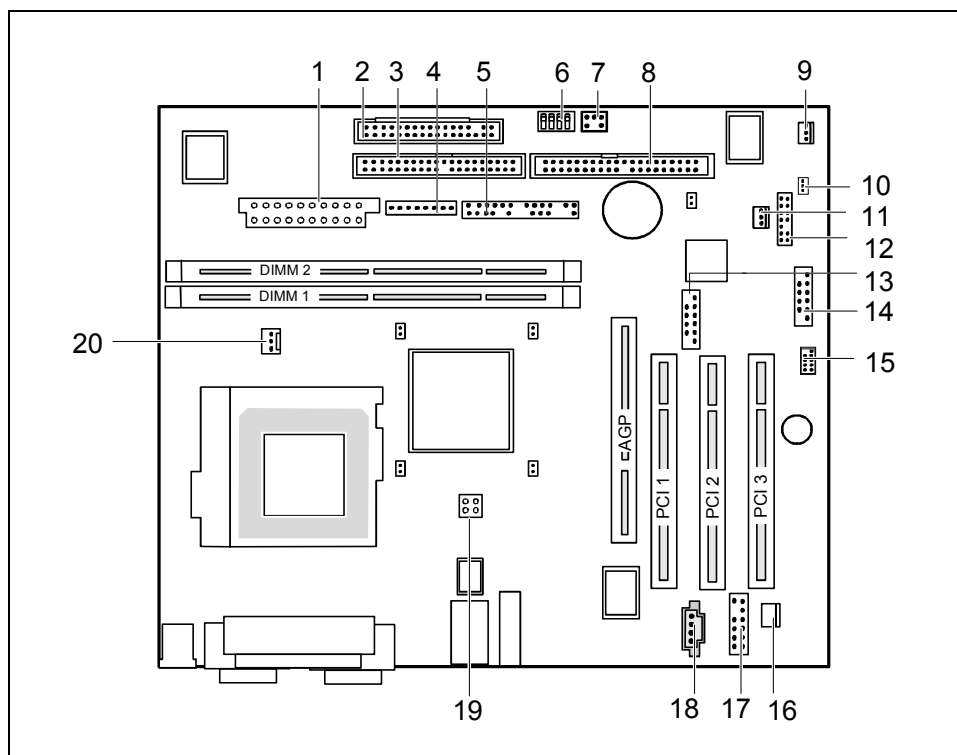

- | | |
|------------------------------------|-------------------------------------|
| 1 = Power supply ATX | 12 = LCD display |
| 2 = Floppy Disk Drive | 13 = USB ports C / D |
| 3 = IDE drives 3 and 4 (secondary) | 14 = USB ports E / F |
| 4 = Power supply monitoring | 15 = COM2 |
| 5 = Connector for front panel | 16 = SP/DIF (digital Audio) |
| 6 = Switch | 17 = Audio front panel |
| 7 = Jumpers | 18 = CD audio input |
| 8 = IDE drives 1 and 2 (primary) | 19 = Power supply |
| 9 = Fan 2 | 20 = Fan 1 (e.g. for the processor) |
| 10 = Power On LED II | |
| 11 = Cover monitoring | |


The components and connectors marked are not necessarily present on the mainboard.

Connectors




Some of the following connectors are optional!

Power supply ATX connector

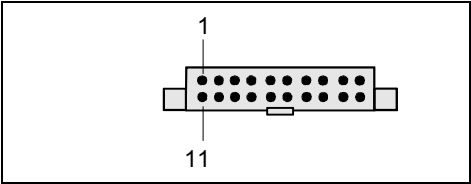


Pin	Signal	Pin	Signal
1	+3.3V(P2V2P)	11	+3.3V(P2V2P)
2	+3.3V(P2V2P)	12	-12V (P12VN)
3	GND	13	GND
4	+5V (VCC)	14	PS on (low asserted)
5	GND	15	GND
6	+5V (VCC)	16	GND
7	GND	17	GND
8	Powergood (high asserted)	18	-5V (5PVN)
9	+5V Auxiliary (VCC Aux)	19	+5V (VCC)
10	+12V (P12VP)	20	+5V (VCC)

Power supply control

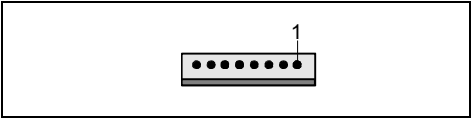

Pin	Signal
1	AC Outlet (high asserted)
2	PS FAN Control (PS FAN C max 3mA)
3	Reserved
4	PS FAN Sense
5	SMB CLK
6	SMB DATA
7	VCC EEPROM (+3,3V)
8	GND


Front panel connector

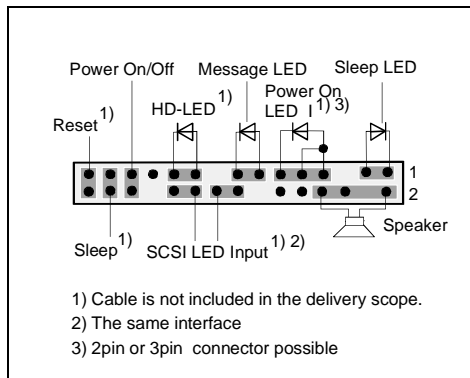

1) The sleep button (optional) functions only for operating systems with APM (not with ACPI).

Pin	Signal	Pin	Signal
1	Sleep LED (Cathode)	2	In case of 'Sound via internal system speaker' support: Speaker negative Otherwise: not connected
3	Sleep LED (Anode)	4	Key
5	Key	6	GND
7	PowerON_LED (Anode)	8	In case of 'Sound via internal system speaker' support: Speaker positive Otherwise: not connected
9	PowerON_LED (Anode)	10	Key pin
11	Sleep LED and PowerON_LED (Cathode)	12	Key pin
13	Message LED (Anode)	14	Key
15	Message LED (Cathode)	16	Not connected
17	Key	18	SCSI LED input (low asserted)
19	HD_LED (Anode)	20	SCSI LED input (low asserted)
21	HD_LED (Cathode)	22	Not connected
23	GND	24	Key
25	Power button (low asserted)	26	GND
27 ¹⁾	Sleep button (low asserted)	28	GND
29	Reset button (low asserted)	30	GND


LED connector II

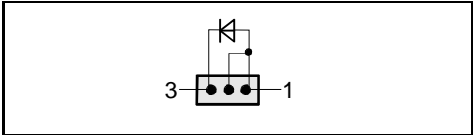

Pin	Signal
1	Power On LED II (Anode)
2	Power On LED II (Anode)
3	Power On LED II (Cathode)

Fan 1 connector


(system fan - supervised)

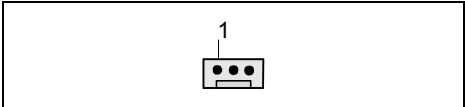

Pin	Signal
1	GND
2	Controlled Fan voltage (0V, +6V ... +12 V, max. 1 A) or fix Fan voltage (+12 V, max. 1 A)
3	Fan sense


Fan 2 connector

(system fan - supervised)

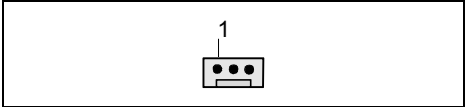

Pin	Signal
1	GND
2	Fix Fan voltage (+12 V, max. 1 A)
3	Fan sense


LCD status indicator connector

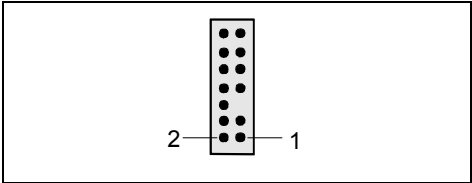

Pin	Signal	Pin	Signal
1	SMB CLK	2	GND
3	SMB DATA	4	GND
5	Key	6	RFU Reseved for Future Use
7	LAN Activeb Icon	8	LAN Link Icon
9	Harddisk Action Icon	10	BMC Alert Icon
11	Message Icon	12	Sleep Icon
13	Power Icon	14	P3V3P DUAL


UBS port C/D and E/F - dual channel

(internal or external via special wire)

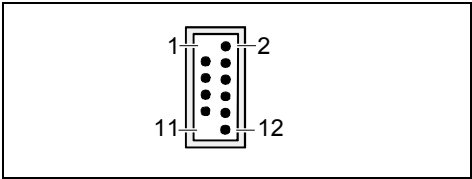


Pin	Signal	Pin	Signal
1	Key	2	Chipcardreader on
3	VCC C	4	VCC D
5	Data negative C	6	Data negative D
7	Data positive C	8	Data positive D
9	GND	10	GND
11	Key	12	not connected

Intrusion connector for case open detect for optional push-button (opener)

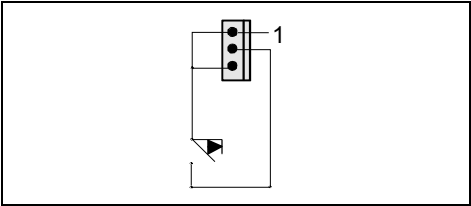


Pin	Signal
1	GND
2	Case open (low asserted)
3	Intrusion switch present (low asserted)

Audio S/PDIF (2-pin)

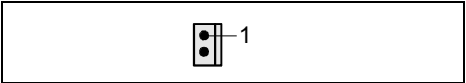


Pin	Signal
1	GND
2	SPDIF out

Audio S/PDIF (3-pin)

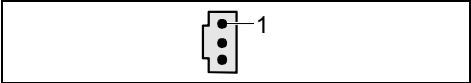


Pin	Signal
1	GND
2	SPDIF out
3	GND

Audio front panel connector

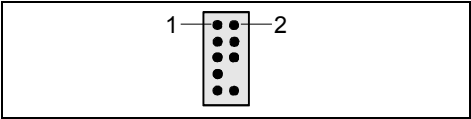


Pin	Signal	Pin	Signal
1	Micro input	2	Analog GND
3	Micro bias	4	Analog VCC
5	Right line output	6	Right line return
7	NC	8	Key
9	Left line output	10	Left line return

CD-ROM audio connector

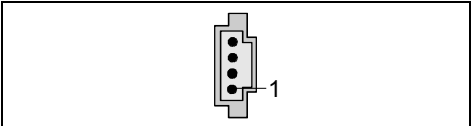

Pin	Signal
1	Left CD audio input
2	CD GND
3	CD GND
4	Right CD audio input

Additional power supply

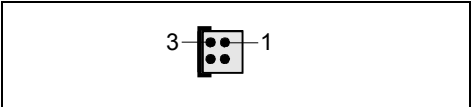

Pin	Signal	Pin	Signal
1	GND	3	+12V
2	GND	4	+12V

Configuration

Functions controlled by the configuration switch

Switch	Function	SKP	RCV
1	Password skip enabled	on	
1	Password skip disabled	off	
2	Recovery BIOS enabled		on
2	Recovery BIOS disabled		off

Power

Power requirement for onboard components (worst case)

Source	Voltage	Maximum variation	Maximum current	Comment
Main power supply	+12 V	±5 %	3-6 (8) A	
Main power supply	-12 V	±10 %	0.05 A	
Main power supply	+5.0 V	±5 %	0.9 A	
Main power supply	+3.3 V	±5 %	2.2 (3.4) A	
Auxiliary power supply	+5.0 V	±5 %	0.35 (2) A	

Power loadability

Fuse number	Maximum fuse current	Function	Maximum function current
1	750 mA	Keyboard port Mouse port VGA connector	Not specified Not specified Minimum 50 mA
2	500 mA	Universal serial bus (USB) Port A	500 mA
3	500 mA	Universal serial bus (USB) Port B	500 mA
4	500 mA	Universal serial bus (USB) Port C	500 mA
5	500 mA	Universal serial bus (USB) Port D	500 mA
6	500 mA	Universal serial bus (USB) Port E	500 mA
7	500 mA	Universal serial bus (USB) Port F	500 mA

Documentation

- ▶ Insert the "Drivers & Utilities" CD.
- ▶ If the CD does not start automatically, run the *START.EXE* file in the main directory of the CD.
- ▶ Select your mainboard or your device.
- ▶ Select *Documentation*.
- ▶ Select - *Technical Manuals*
- ▶ Select - *Technical Manuals (BIOS)*



You may have to install the Acrobat Reader - Software on the CD-ROM (path: *utls/acrobat*) before reading!

For more details please read the according *readme.txt* files.

Installing drivers

- ▶ Insert the "Drivers & Utilities" CD.
- ▶ If the CD doesn't start automatically call the *START.EXE* file in the main directory of the CD.
- ▶ If the mainboard list is displayed select the mainboard or select under *Driver* the operating system used and the audio and video drivers.

Upgrading main memory

Support:	The system needs at least one module and can manage two DDR modules.
Size:	From 128 Mbytes up to 2 Gbytes DDR-SDRAM
Technology:	DDR 200 or DDR 266 unbuffered DIMM modules. 184 pin, 2.5 V, 64 bit 4 internal banks required
Granularity:	For one socket 32, 64, 128, 256, 512 or 1024 MB
ECC support:	No
PC 266 support:	Up to 2 double sided DDR-266 DDR-DIMMs.

Troubleshooting

Message BIOS update

The System BIOS provides optimum support for the processor you have chosen. If the message BIOS update for installed CPU failed

appears the microcode required for the processor inserted must still be loaded. Further information on this is available in the "BIOS Setup" manual on the "Drivers & Utilities" CD provided.

The screen stays blank

If your screen stays blank this may have the following cause:

The wrong RAM memory module has been inserted

- See the chapter "Main Memory" for information which memory modules can be used.

ACPI S3 (Save-to-RAM) and/or ACPI S4 (Save-to-Disk) doesn't work

This mainboard is fully compliant for ACPI S3 and S4. Therefore it is PC99 certified by Microsoft.

If you have any problems with ACPI please ensure that all of your components are supporting ACPI S3 and S4.

- Operating system
- Hardware and drivers of controllers (e. g. VGA, audio, LAN, SCSI controllers).

For further information please refer to <http://developer.intel.com/technology/iapc/involve.htm>.